

NXT[®] Air Motor Seal Kits

406753C

ENG

Kit 24A539 - For M02LN0

Kit 24A543 - For M04LN0 and M04LT0

Kit 24E986 - For M07LN0 and M07LT0

Kit 24A547 - For M12LN0 and M12LT0

Kit 24A551 - For M18LN0 and M18LT0


**Important Safety Instructions**

Read all warnings and instructions in this manual and in your air motor or pump manual. Save all instructions.

Parts

Ref.	Description	Qty.
1	U-CUP	1
2	RING, retaining*	1
3	O-RING, piston	1
4	O-RING, covers	2
5	GASKET, manifold	2
6	GASKET, air valve	1
7	U-CUP with flange	1

* Not shown. Retaining ring in lower cover does not need to be replaced in normal servicing.

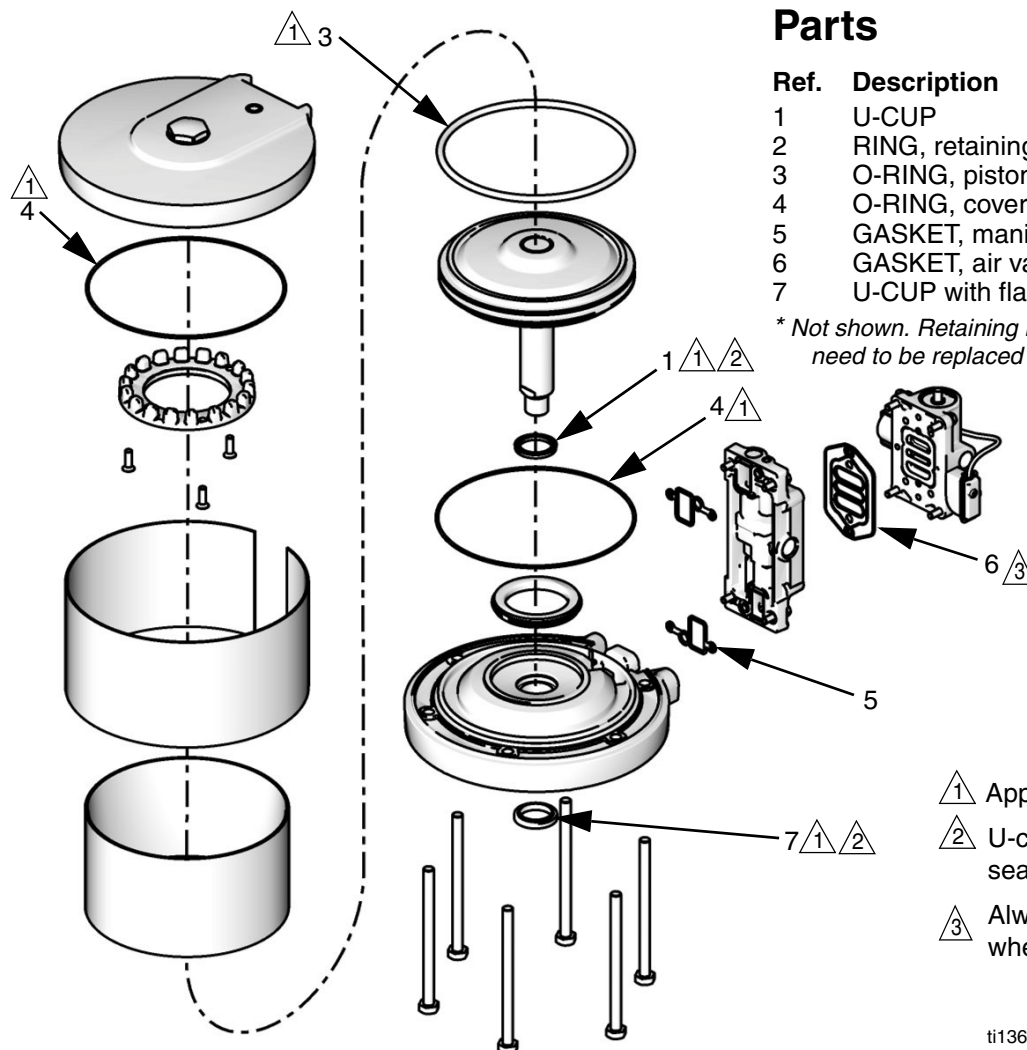

① Apply lubricant.

② U-cup faces up. Flange (bottom seal only) faces down.

③ Always install a new gasket (6) when installing a new air valve.

ti13655a



AFS - Application Fast Set

483, Avenue Lazare Ponticelli

77220 Gretz-Armainvilliers

Tel : 01 64 16 41 63 - Fax : 01 64 16 48 67

contact@afs-bicomposant.fr

www.afs-bicomposant.fr

*All written and visual data contained in this document reflects the latest product information available at the time of publication.
Graco reserves the right to make changes at any time without notice.*

Original instructions. *This manual contains English. MM 406753*

Graco Headquarters: Minneapolis

International Offices: Belgium, China, Japan, Korea

GRACO INC. P.O. BOX 1441 MINNEAPOLIS, MN 55440-1441

Copyright 2009, Graco Inc. is registered to ISO 9001

www.graco.com

Revised 05/2011